

## Corsair Utility Engine Software

### Updated Release

Version 1.5.80

February 27, 2015

Supported Products	Supported Operating Systems
Corsair Vengeance K70 RGB keyboard	Windows 8/8.1
Corsair Gaming K65 RGB keyboard	Windows 7
Corsair Gaming K70 RGB keyboard	Windows Vista
Corsair Gaming K95 RGB keyboard	
Corsair Gaming M65 RGB mouse	
Corsair Gaming Sabre RGB Optical mouse	
Corsair Gaming Sabre RGB Laser mouse	

### Release Notes (1.5.80)

#### **Enhancements**

- CUE 1.5.70 introduces a new **Standard Settings** mode under the lighting tab. Standard Settings will allow for one click effects of the most popular types of lighting for our keyboards for instant customization. Users who prefer Advanced Settings can click on the button to revert back to the original lighting customization. For more information, please review the included Quick Start Guide (QSG) for CUE 1.5 release.
- Graphical improvements to HID images between Assignments and Lighting tabs.
- Graphical user interface for Performance tab on all Corsair RGB Mice has been improved.

#### **Resolved Issues**

- Made improvements to profile import/export conversion for Advanced Lighting modes.
- Lighting and Performance Tabs swapped for better organization.
- Resolved certain runoff text issues with multiple languages.
- Resolved memory consumption issue with device images preloaded in CUE.
- Resolved an issue with Text action and delays.
- QWERTF is now a predefined group for K95 RGB Keyboards (M2 Button).
- Mice default DPI is now set to 1500 from 400.
- Various other minor fixes within the software.

### Keyboard Connectivity:

- Connecting via USB 3.0: Use one connector (the one with the keyboard icon) when connecting via USB 3.0
- Connecting via USB 2.0: Use both connectors when using USB 2.0. Important Note: Plug in the connector with the two arrows icon first, and the connector with the keyboard icon second.