

# Corsair One i500 BIOS Update SOP

# Required Components


- USB Disk with FAT32 file system
- BIOS for Corsair One i500
  - You can download the BIOS package from Corsair Website

# Caution

- Please extract the BIOS-zip file that you have downloaded and store it to your USB storage device
- Please **DO NOT** shutdown or restart system until BIOS update process is completed



# Step 1. Entering to BIOS menu

Boot up your system & press “Delete” key to enter BIOS menu to check your current BIOS version.

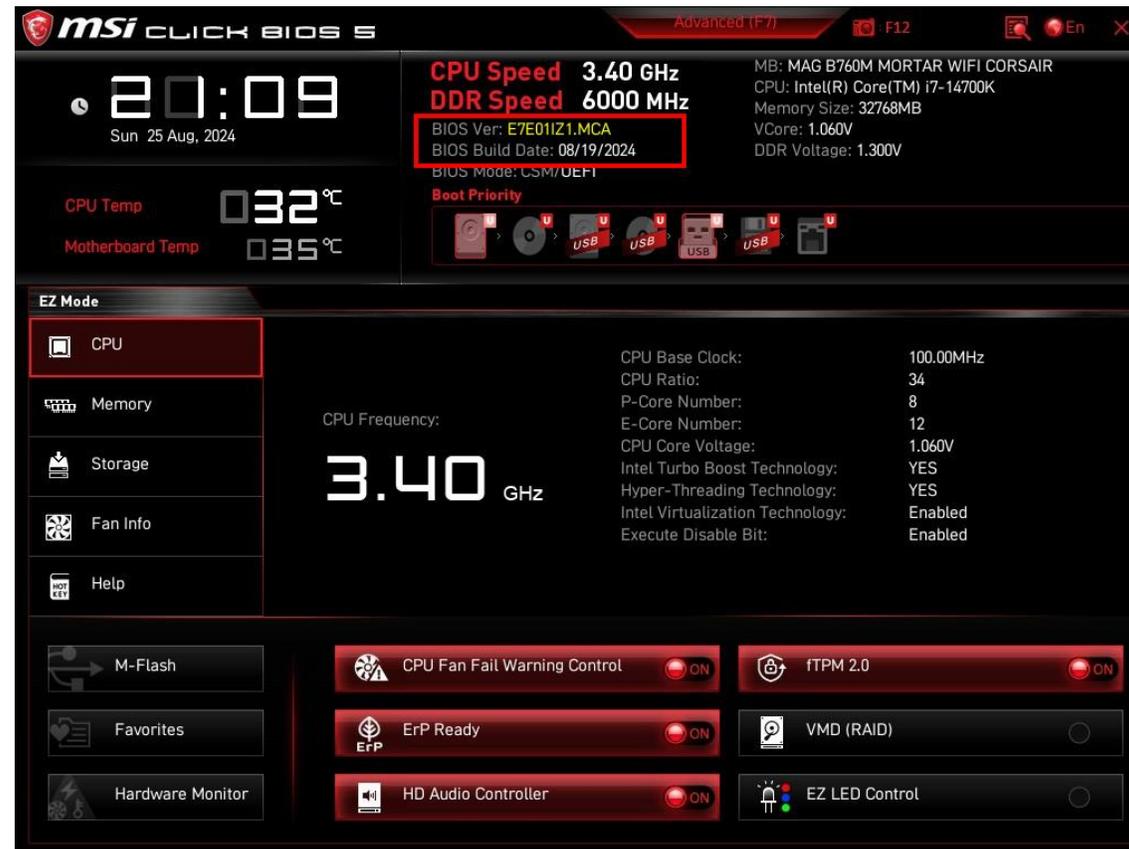


# Step 2. M-flash for BIOS update

2.2 select "M-Flash". You can find M-Flash Button in both BIOS EZ Mode and BIOS Advance Mode.

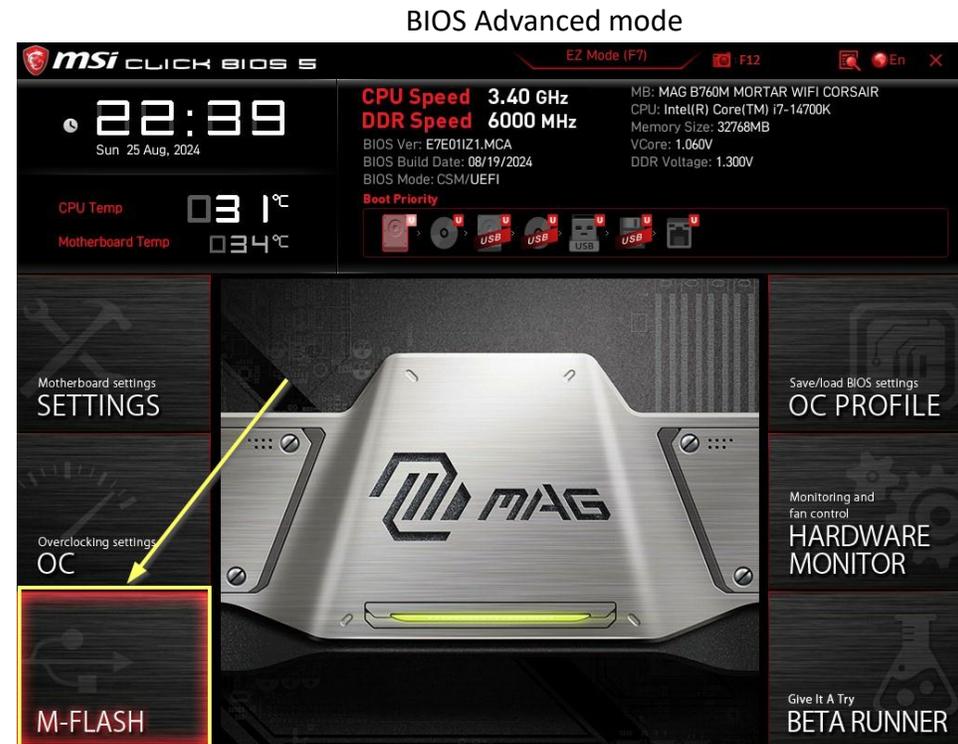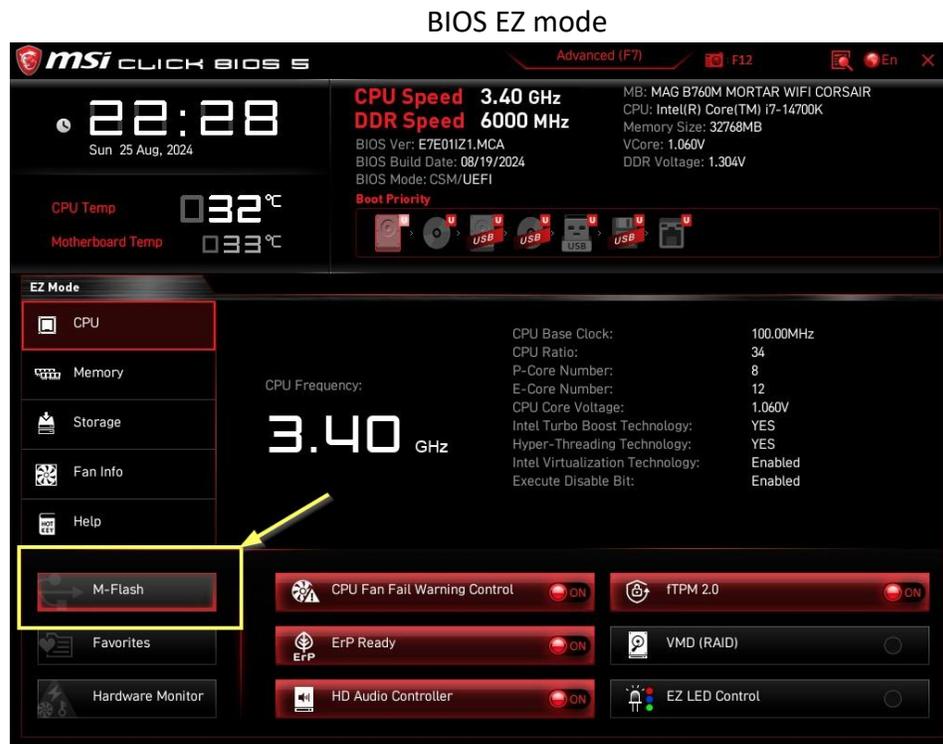


# Step 2. M-flash for BIOS update

2.2 After selecting “M-Flash”, a notification will appear telling you the system will automatically reboot and enter flash mode. Press “Yes” to continue.

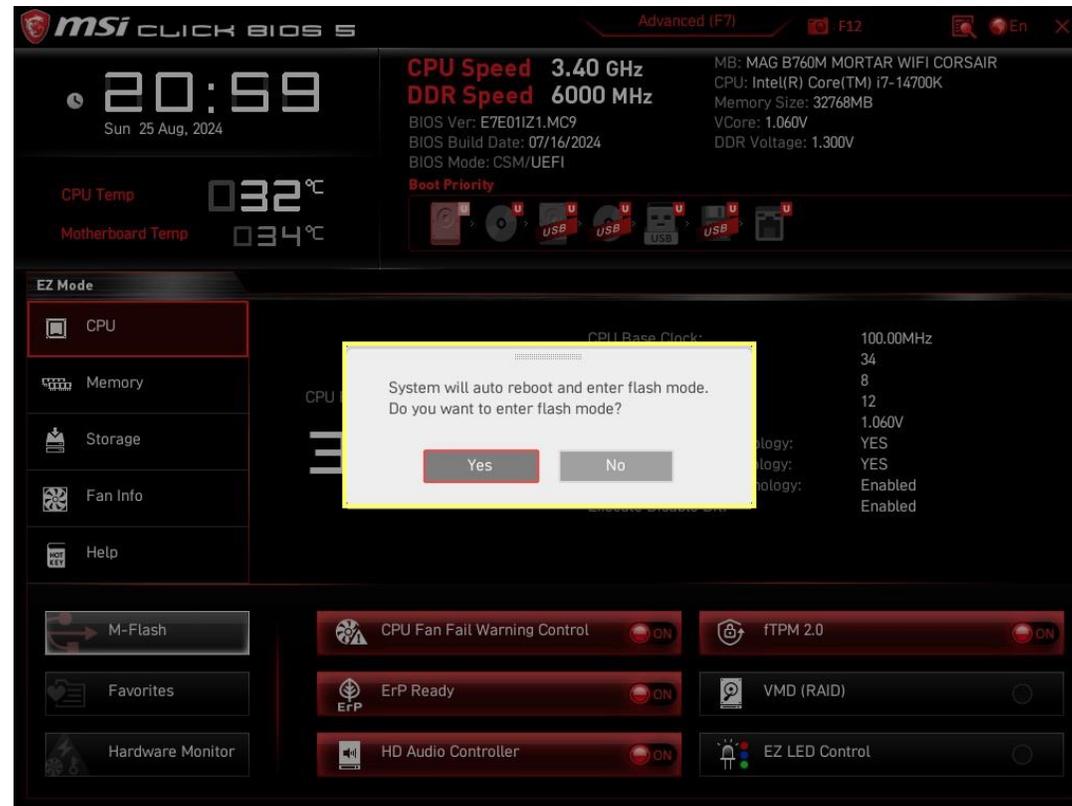


# Step 3. Perform BIOS update

3.1 Select USB storage device and file path with the downloaded BIOS.

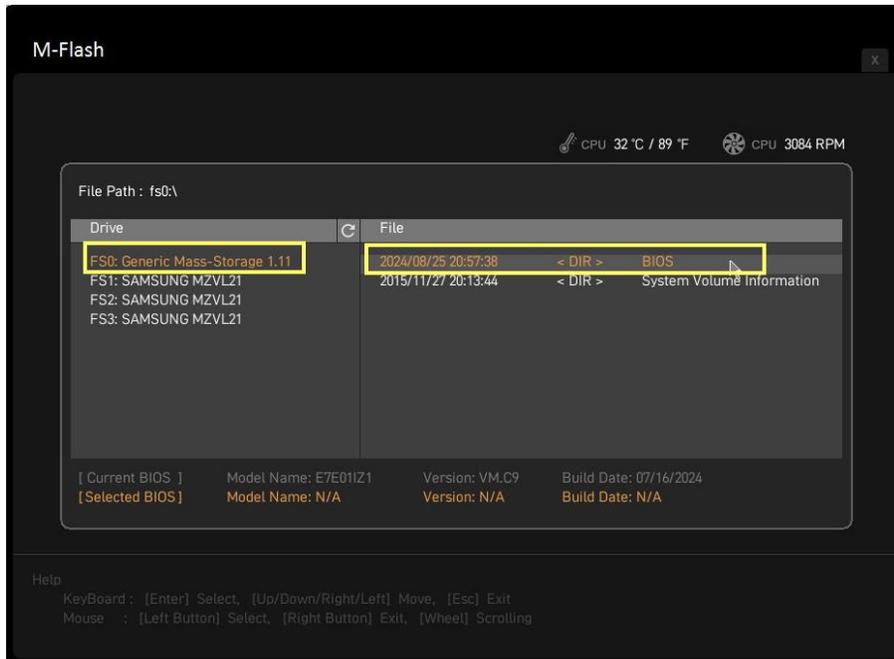

3.2 Select the BIOS which you want to update and press “Enter” to start updating.

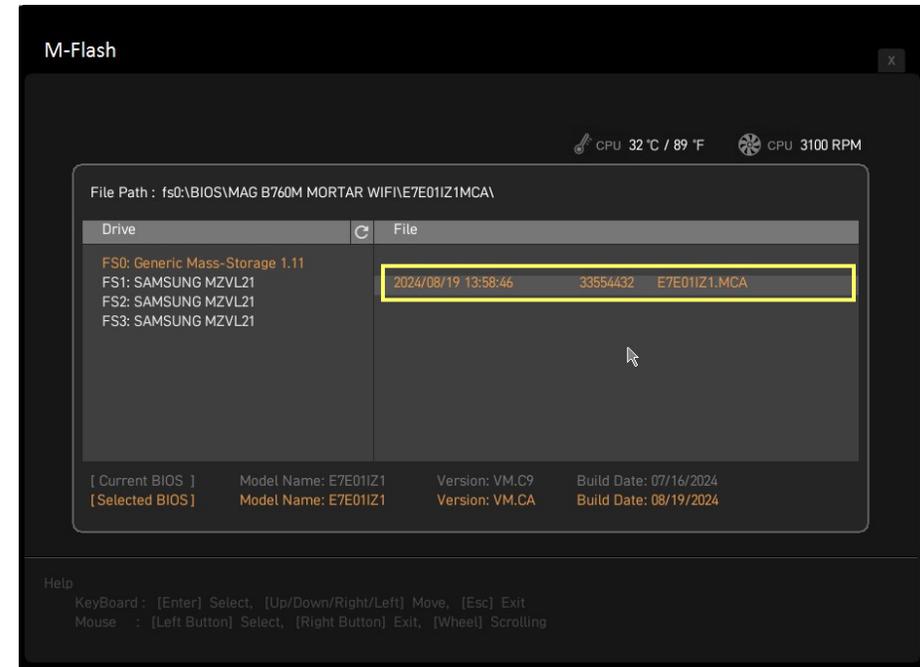

*Note 1: You can double check the Current BIOS version and the Selected BIOS version at the bottom of the screen.*


*Note 2: If you cannot see the BIOS in M-Flash, please double check if the downloaded BIOS is correct*

# Step 3. Perform BIOS update

3.3 A notification will appear to confirm if you have selected the correct BIOS file.


Press **“Yes”** to start updating.

Press **“No”** if you have noticed the BIOS file is not correct

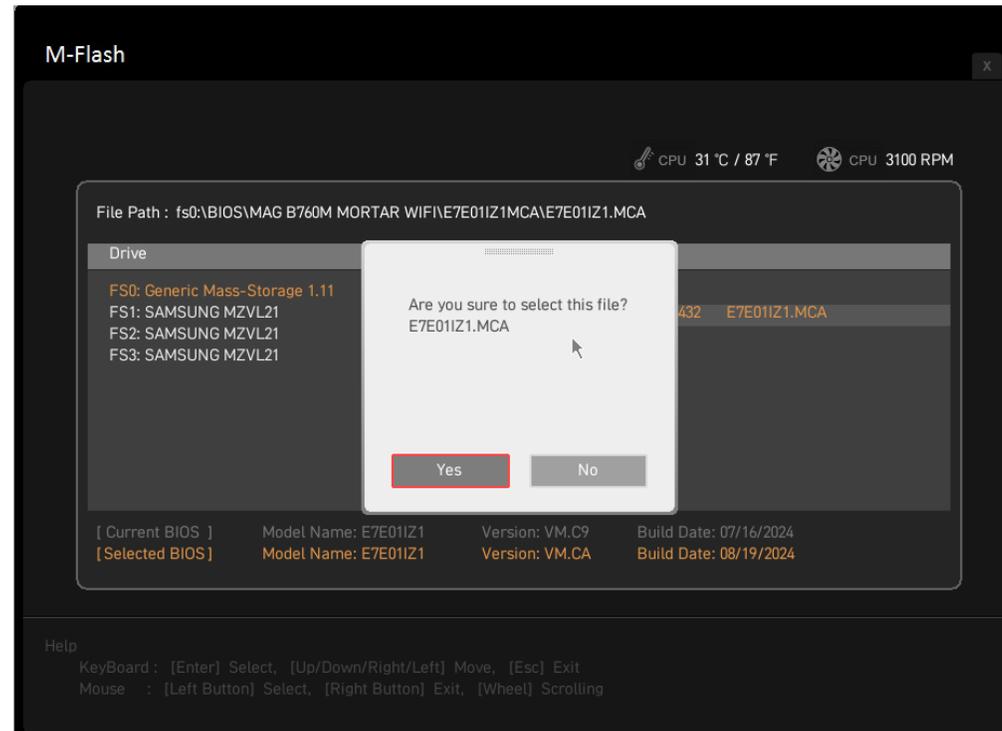

# Step 3. Perform BIOS update


3.4 BIOS will start updating

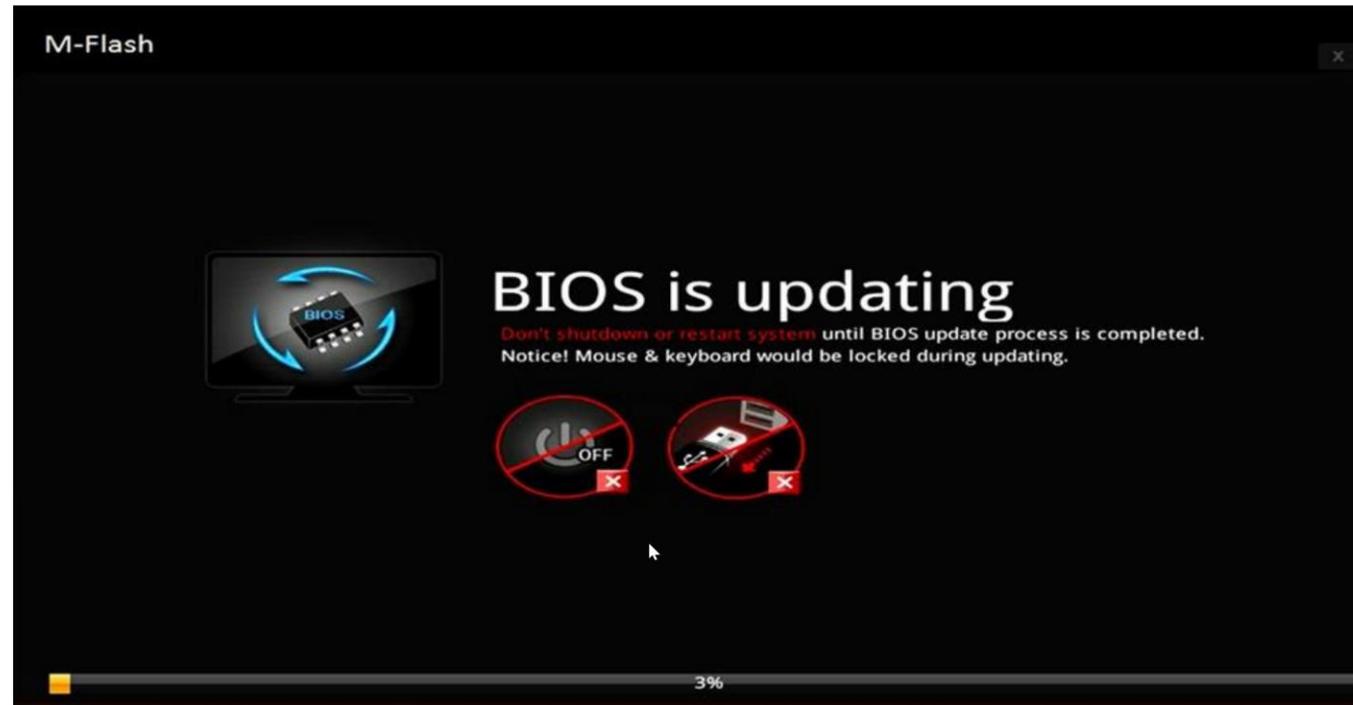


*Note: Please DO NOT shutdown or restart system until BIOS update process is completed.  
Note: Please also note that Mouse and Keyboard would be locked during updating.*

# Step 4. Check BIOS version after update Completed

4.1 After BIOS update is finished, the system will automatically restart. Enter to BIOS menu to check updated BIOS version

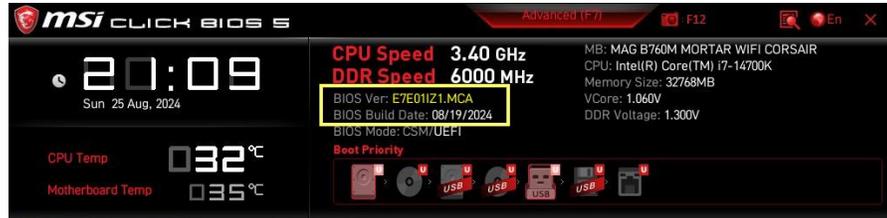

4.2 Check the Microcode in **Settings\System Status** of BIOS Advanced mode

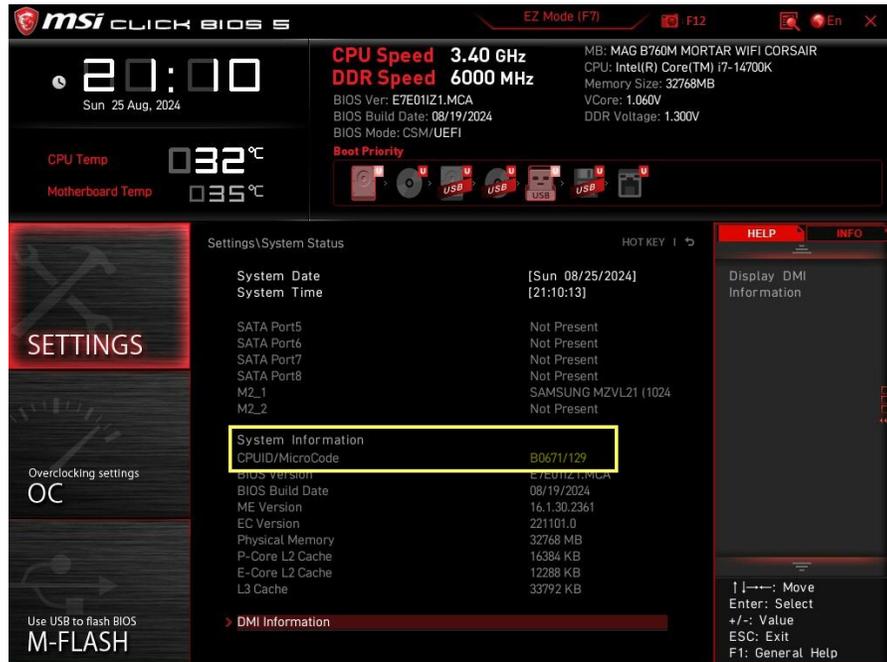

# Corsair One i500 BIOS Release History

FW Version	Description
BC4	MP Release
BC5	Integrated Microcode 0x12B