

Corsair One i500 PC

Front light strip Update SOP

Required Components

- System can access the internet
- Front light strip is connected
- Firmware for Corsair One i500 light strip
 - You can download the Firmware file from Corsair Website

Caution

 
- Please extract the Firmware file that you have downloaded and store it on your Corsair One i500 PC
- Please **DO NOT** shutdown or restart system until Firmware update process is completed

Step 1. Start the update process

Double-click the Firmware update application, an Upgrade Tool window will pop up.


Check the Connect Status is “Success”.

Click on the “Upgrade” button to start the Firmware update process.

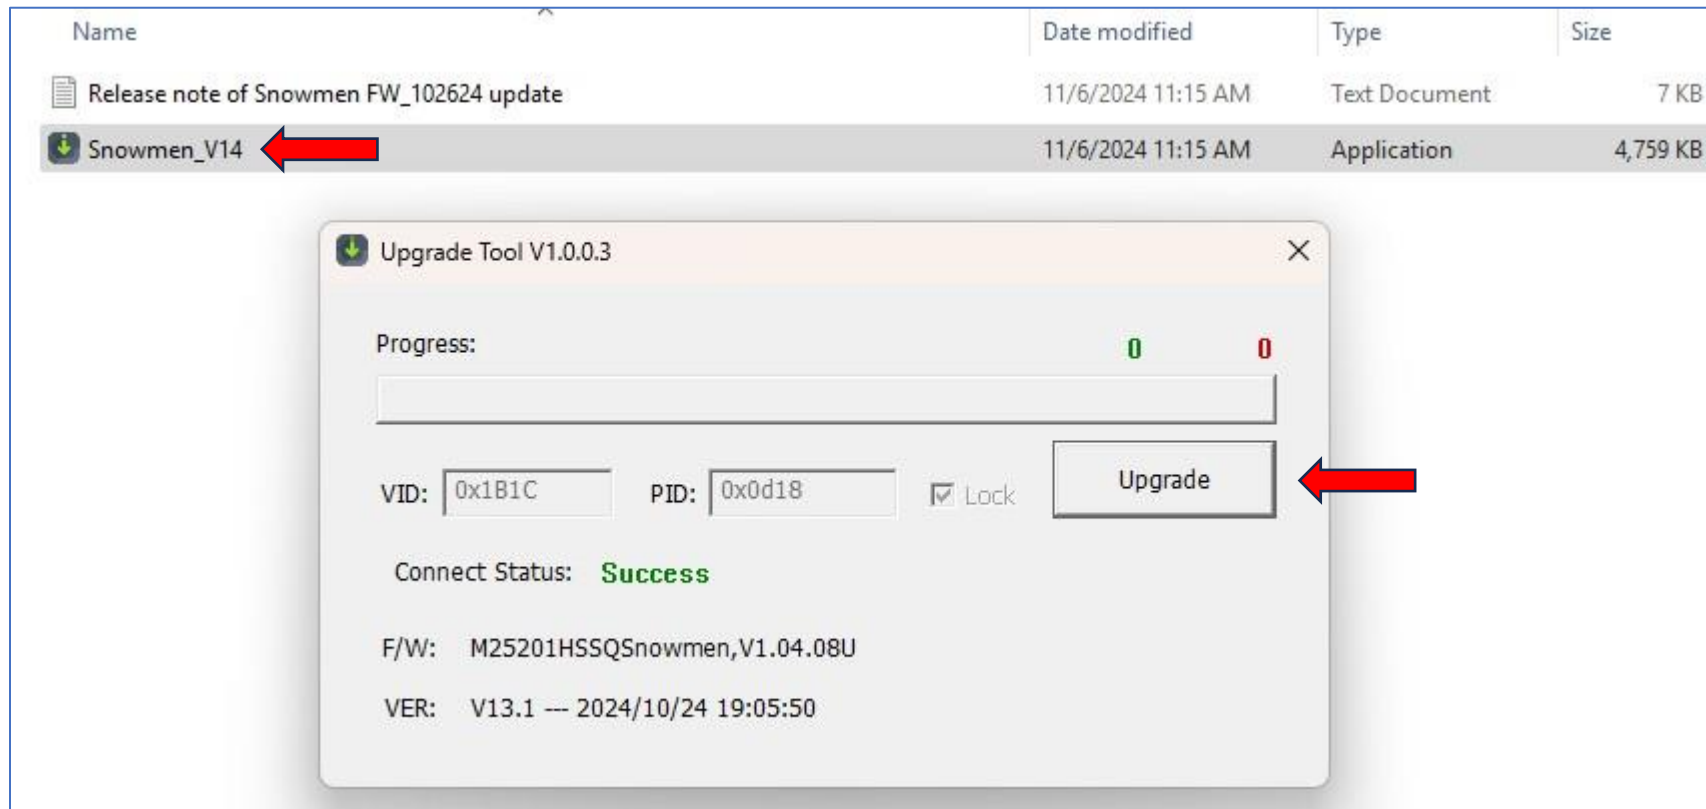


Step 2. Firmware update in progress

 Firmware update in progress, please **DO NOT** shut down the system or turn off the Upgrade Tool.

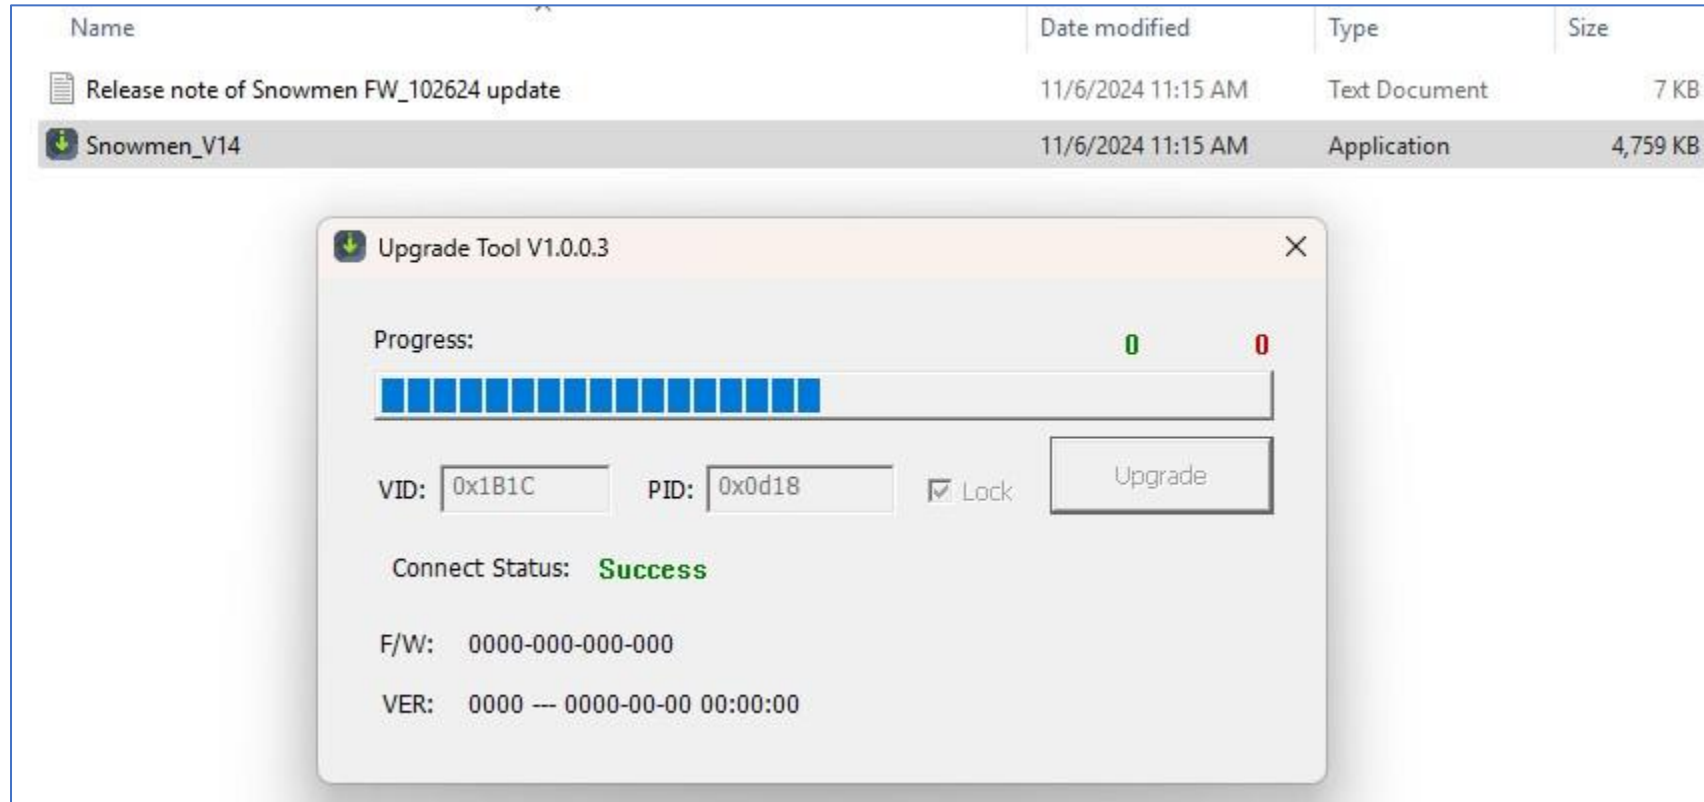

Step 3. Firmware update complete

 
After completing the Firmware update process, a notification window will appear and states “Device upgrade successful!”. Click on “OK” to finish the process.

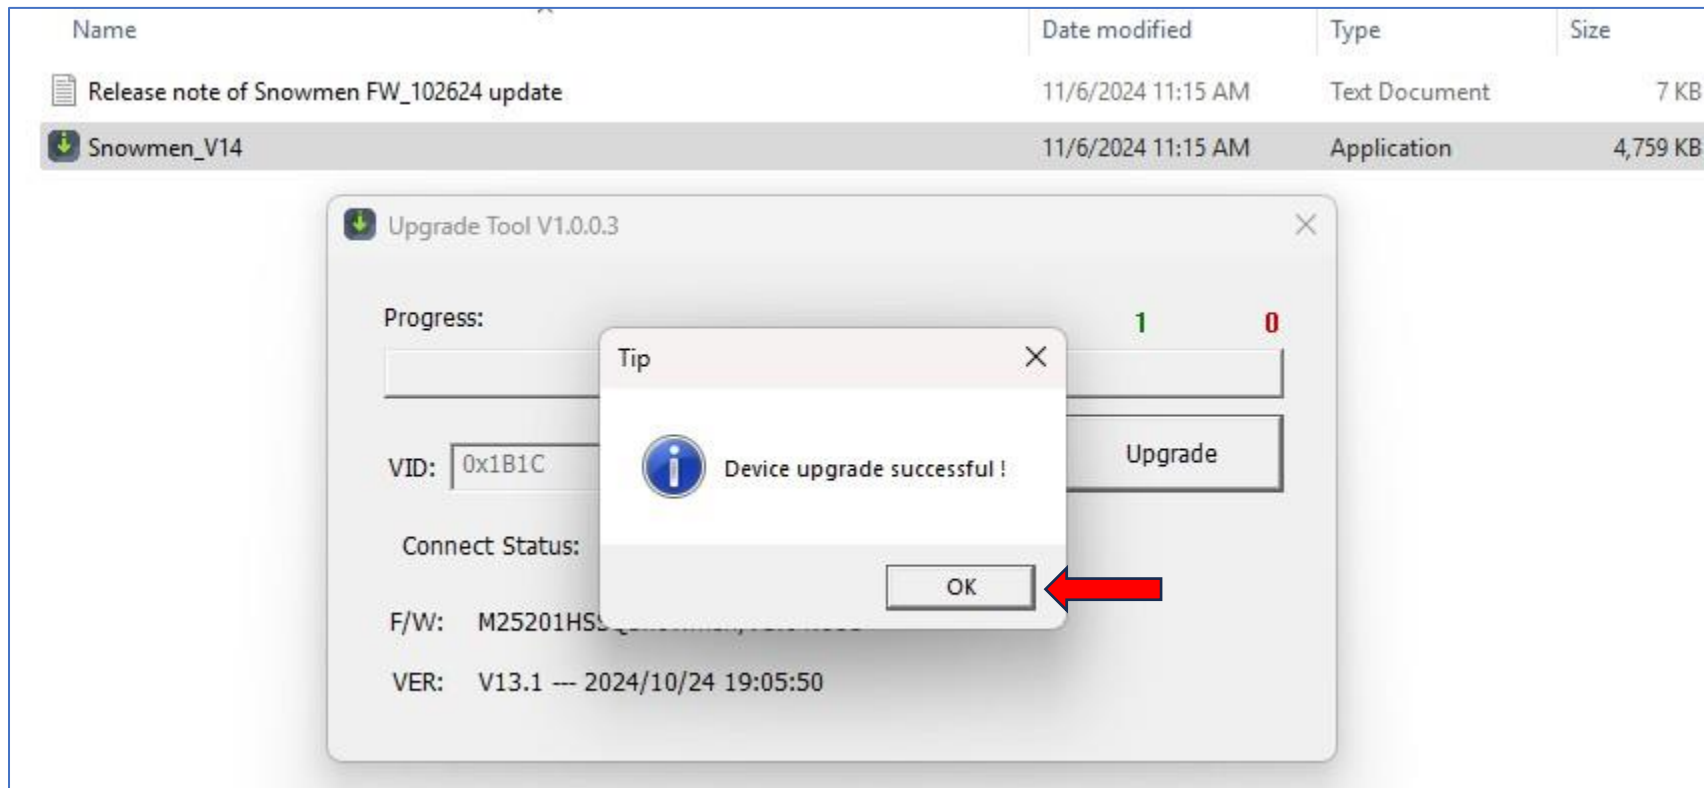

Note

After the Firmware update process is completed, the system will redetect the light strip, and a warning message will appear for a short time.

 When the light strip has been detected, the warning message will disappear.

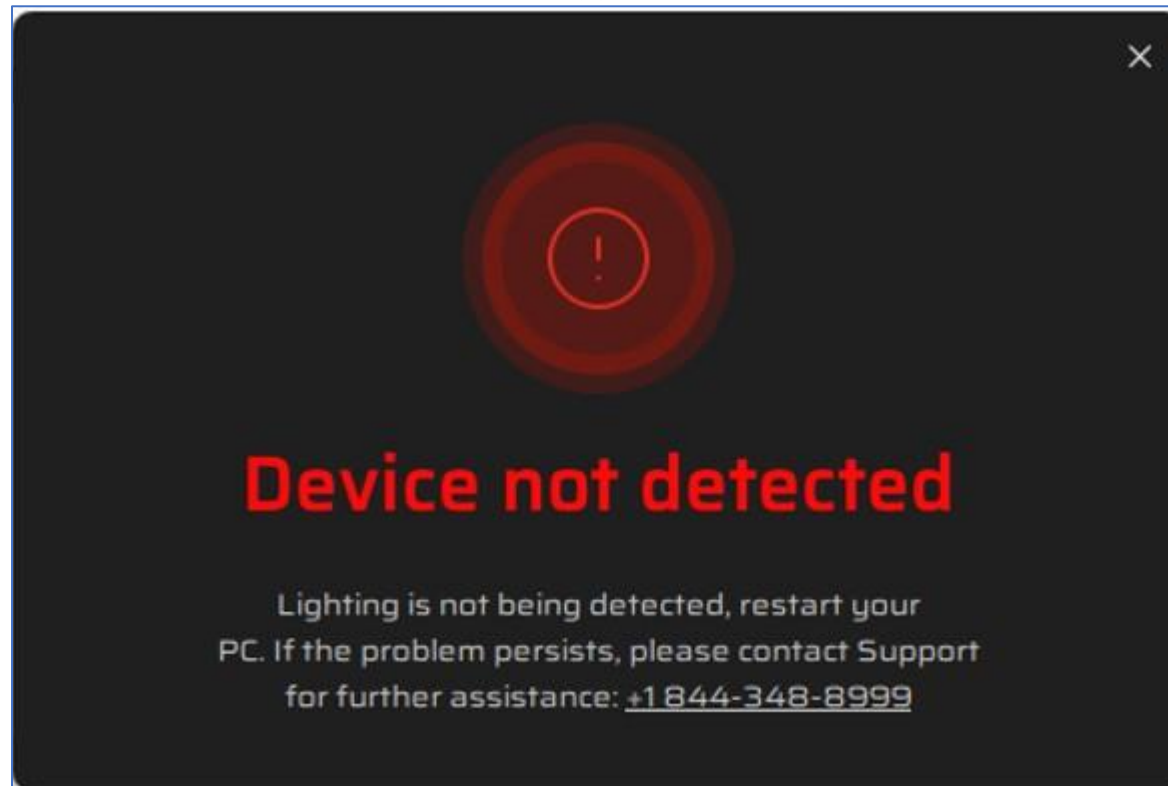

Corsair One i500 light strip Firmware Release History

FW Version	Description
V085	MP Release
V11	<ul style="list-style-type: none">- Fix the small segment in the Brightness level bar when increased or decreased by the physical touch bar- Fix the issue that static color settings can not be kept by Software.- Fix the maximum RGB# from 128 to 255.- Fix the Power Button lighting to 25% brightness when turned off light strip by 3 seconds hold.
V14	Correct the Violet HEX#.